


How to Extend the Battery Box HV

The SOC has to be about the same in all battery modules. Therefore, please follow the below process.

1. Charge new module to 100% with HV Charger



When the green led is flickering continuously, battery module is charging.
When the green led is on without flickering, battery module is fully charged.

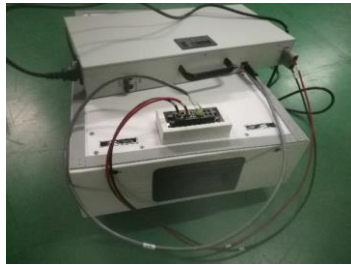


2. Add module with 100% when existing battery is at 100%

SOC = 100%



SOC = 100%

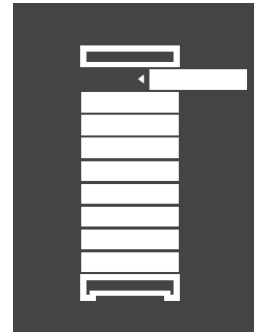

3. Change Module Number

B-Box H

Home

Device Information

Statistics Information

Current Alarm

History Alarm

Run Data

Soc Password

User Information

Update

Reboot and Restore

Manage Parameter

BMS Parameter

Debug

User Info

Time and Date * Hour: 13 Min: 08 Day: 05 Month: 03 Year: 2018

Apply Cancel

Server Ip Address * bboxsrvr.byd.com.cn

AddressPosition Latitude :54 .23 (0.000000)

Longitude :10 .78 (0.000000)

Army Counts * 1

Series Battery Counts * 5

Install Time : 2018-3-5 8:55:6

Inverter * SMA

Country * Germany

Station Name * Showroom

Email : null

Telephone : null

Address : null

Asterisk (*) indicates required fields

Apply Cancel