



1. Cut the packing belt.

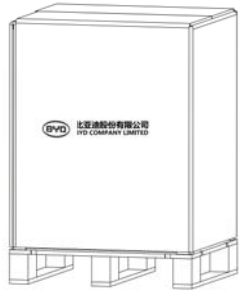


2. Remove the carton

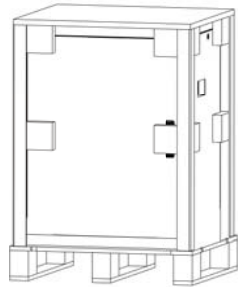


3. Remove the paper angle bead and sponge, put out the accessory in the cabinet




4. Put it down, remove the Pallet

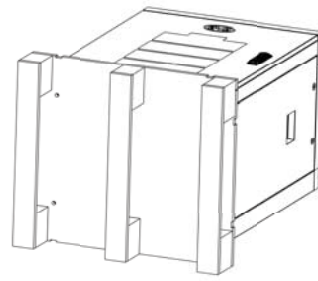


5. Install the anchor bolts

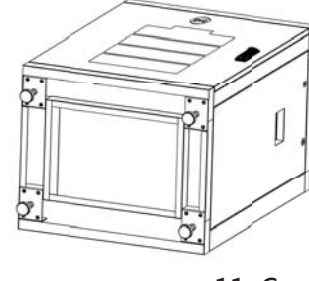


6. Flatten the cabinet

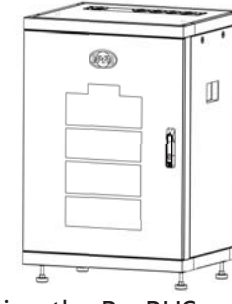


7. Connection the Cable .Torque 10NM

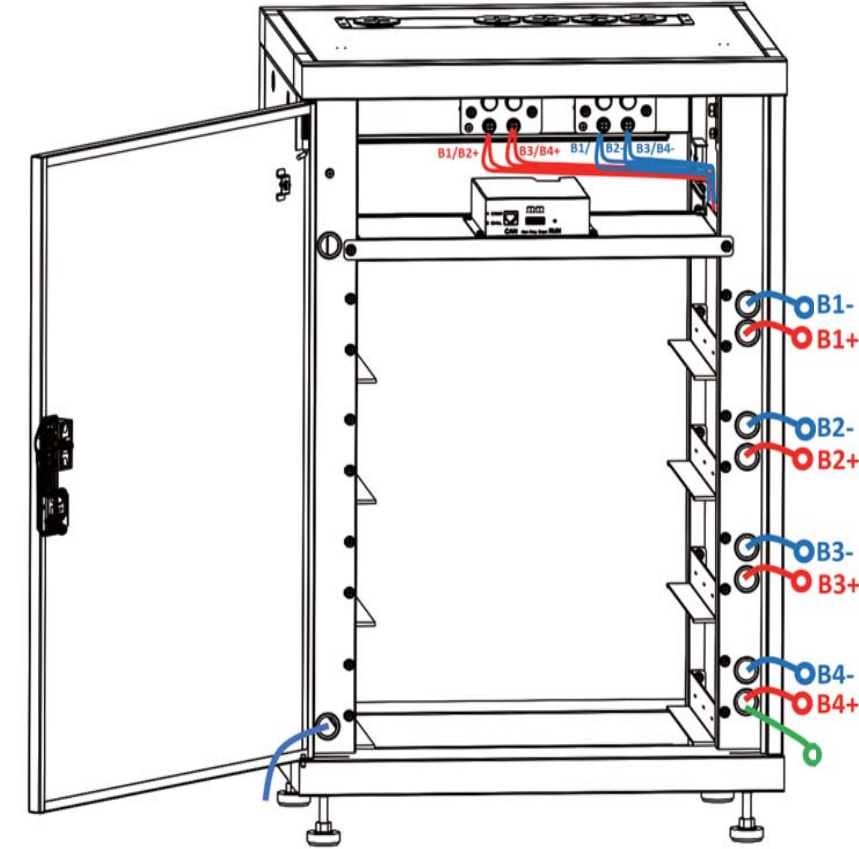


8. Install the first B-Plus

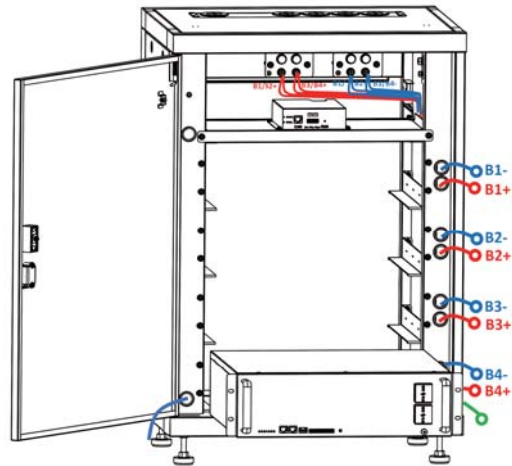


9. Install 2 B-Plus

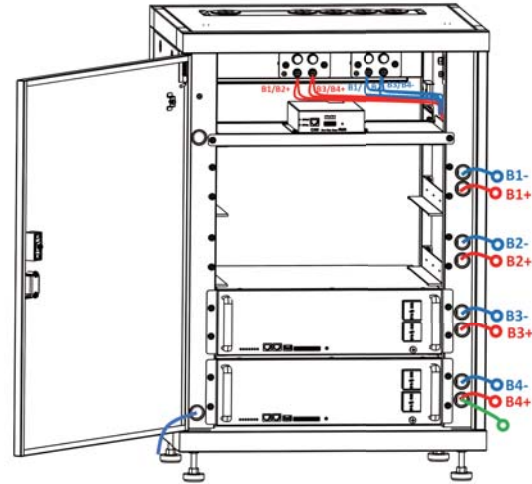


10. Install all B-Plus

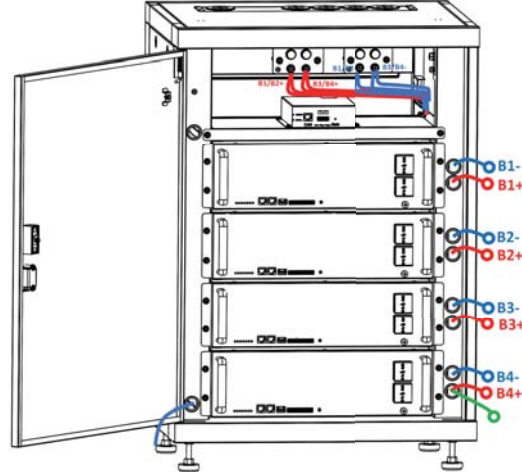

11. Connection the B+ BUS and P+ of B-Plus, B- BUS and P- of B-Plus. Torque 5NM

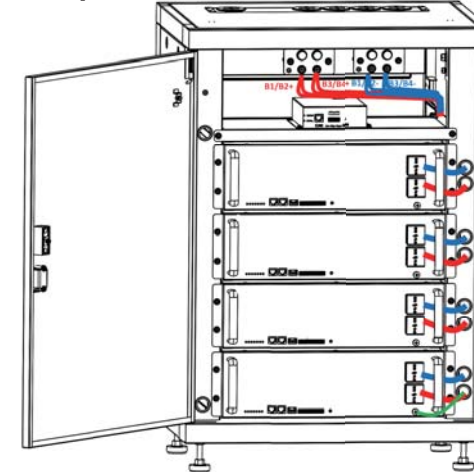

12. Connection grounding cable and Communication Cable

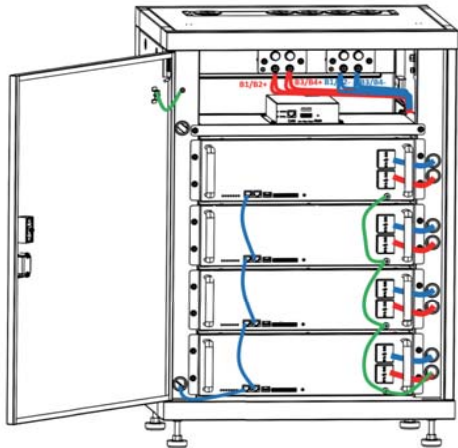

14. Set the battery Address


ADRR



1 0 0 0 0 0

ADRR	DIP	ADRR	DIP	ADRR	DIP
0	00000	11	110100	22	011010
1	10000	12	001100	23	111010
2	01000	13	101100	24	000110
3	11000	14	011100	25	100110
4	00100	15	111100	26	010110
5	10100	16	000010	27	110110
6	01100	17	100010	28	001110
7	11100	18	010010	29	101110
8	00010	19	110010	30	011110
9	10010	20	001010	31	111110
10	01010	21	101010	32	000001

13. Bind up the cable in the side face.

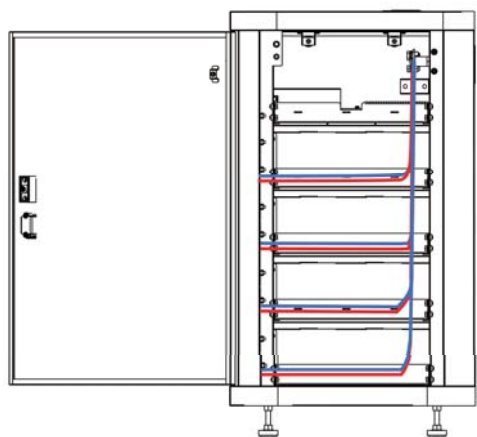

15. Connection the inverter

